


NEW HOLLAND

FX28

FX58

OPERATOR'S MANUAL

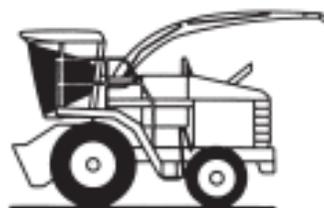

86589770 3/99
604.73.161.00



NEW HOLLAND

Reprinted

TABLE OF CONTENTS

Title	Page
Section 1 - Introduction	
1.1 To the owner	1-1
1.2 Intended use	1-2
1.3 Product identification	1-3
1.4 Important ecological considerations	1-9
1.5 Airborne noise emission	1-10
1.6 Vibration level information	1-10
1.7 Electromagnetic compatibility (EMC)	1-11
1.8 Safety requirements for fluid power systems and components – Hydraulics	1-11
1.9 Legal obligations	1-11
1.10 Safety	1-12
1.11 Safety precautions	1-13
Section 2 - Operation	
2.1 Machine function	2-2
2.2 Emergency exit	2-3
2.3 Control switches	2-4
2.4 Warning lights	2-11
2.5 Adjust-O-Matic™ panel	2-16
2.6 Multifunction lever and arm rest module	2-18
2.7 InfoView monitor	2-23
2.8 Steering column and cab floor pedals	2-25
2.9 Console module	2-28
2.10 Operator's seat and surroundings	2-30
2.11 Cab roof	2-32
2.12 Lights and sockets	2-36
2.13 Battery box	2-40
2.14 Access to machine components	2-41
2.15 Starting, stopping and driving the forage harvester	2-43
2.16 Towing the forage harvester	2-46
Section 3 - Lubrication	
3.1 Grease fittings and lubrication intervals	3-1
3.2 Gearboxes	3-15
3.3 Engine	3-23
3.4 Chains, threaded rods and pivot points	3-25
3.5 Brakes	3-26
3.6 Hydraulic and hydrostatic systems	3-27
3.7 Lubrication schedule	3-33
Section 4 - Field operation	
4.1 Before starting operation	4-1
4.2 Starting in the field	4-2

4.3	Attachment operation	4-4
4.3.1	Attachment height control	4-4
4.3.2	Attachment and feed rolls reversing system	4-11
4.3.3	Attachment speed adjustments	4-13
4.3.4	Attachment and feed rolls blockage - Manual clearing	4-14
4.4	Auto-Pilot [accessory]	4-15
4.5	Metalert III™ metal detector	4-16
4.6	Change of length of cut	4-19
4.7	Adjust-O-Matic™ system	4-20
4.7.1	Automatic sharpening	4-20
4.7.2	Automatic shearbar adjustment	4-23
4.8	Crop processor [accessory]	4-25
4.9	Blower	4-26
4.10	Silage additives application	4-26
4.11	Spout	4-28
4.12	Traction	4-29
4.12.1	Differential lock	4-29
4.12.2	Four-wheel drive (if installed)	4-29
4.13	Air conditioning [accessory]	4-30
4.14	Audible alarm	4-30
4.15	Hydraulic system	4-31
4.16	InfoView monitor	4-32
4.16.1	Performance mode	4-34
4.16.2	Memory mode	4-37
4.16.3	Service mode	4-39
4.16.4	Calibration	4-42
4.16.5	Metal detector diagnostic page	4-61
4.16.6	User messages	4-64

Section 5 - Adjustments and Maintenance

5.1	Drivelines and components	5-1
5.1.1	Main drive	5-4
5.1.2	Cutterhead drive	5-6
5.1.3	Blower drive	5-7
5.1.4	Feed roll drive	5-7
5.2	Splitting of components	5-8
5.2.1	Attachment	5-9
5.2.2	Inspection opening between upper feed rolls and cutterhead	5-11
5.2.3	Attachment together with upper feed rolls	5-13
5.2.4	Flip down upper feed rolls	5-15
5.2.5	Inspection between cutterhead or crop processor and blower	5-16
5.2.6	Remove chopper body with a-frame	5-17
5.2.7	Remove chopper body with hydraulic jack	5-21
5.2.8	Blower	5-24

5.3	Metal detector stop system	5-25
5.3.1	Metalert III™ electronic metal detector	5-25
5.4	Feed rolls	5-27
5.4.1	Smooth roll scraper	5-27
5.4.2	Crop guides	5-28
5.4.3	Upper feed roll guide rails	5-30
5.4.4	Upper feed roll fixation	5-31
5.4.5	Upper feed roll tension	5-32
5.5	Cutterhead	5-33
5.5.1	General information	5-33
5.5.2	Knives	5-34
5.5.3	Knife sharpening	5-43
5.5.4	Shearbar adjustment	5-51
5.6	Crop processor / Grass equipment	5-58
5.6.1	Crop processor rolls clearance	5-58
5.6.2	Grass plates	5-61
5.7	Blower and spout	5-64
5.7.1	Blower	5-64
5.7.2	Spout	5-69
5.8	Auto-pilot	5-71
5.9	Hydraulic equipment	5-71
5.10	Hydrostatic equipment	5-72
5.11	Transmission	5-72
5.12	Brakes	5-72
5.13	Wheels	5-74
5.14	Counterweights	5-75
5.15	Steering axle	5-76
5.15.1	Fixed steering axle	5-76
5.15.2	Adjustable steering axle	5-78
5.15.3	Powered rear axle	5-81
5.16	Engine	5-84
5.16.1	Fuel system	5-84
5.16.2	Cooling system	5-89
5.17	Batteries and alternator	5-92
5.17.1	Batteries	5-92
5.17.2	Alternator	5-94
5.18	Fan, alternator and compressor belts	5-95
5.18.1	Fan drive belts	5-95
5.18.2	Alternator drive belt	5-96
5.18.3	Compressor drive belt	5-97

5.19	Screens, coolers and air intake system	5-99
5.19.1	Screens and coolers	5-100
5.19.2	Air intake system	5-103
5.20	Air conditioning [accessory]	5-105
5.21	Cab air filters	5-106
5.22	Sensors	5-107
5.22.1	Rpm sensors	5-107
5.22.2	End-of-travel sensors	5-110
5.23	Electrical system	5-111
5.23.1	Attachment height sensor	5-111
5.23.2	Electronic box: Fuses and relays	5-114
5.24	Maintenance schedule	5-117

Section 6 - Troubleshooting

6.1	General	6-1
6.2	Automatic sharpening	6-3
6.3	Automatic shearbar adjustment	6-6
6.4	Main drive hydraulic clutch	6-8
6.5	Hydrostatic drive	6-8
6.6	Metal detector	6-10
6.7	Engine	6-12
6.8	Auto-pilot	6-16

Section 7 - Storage

Section 8 - Accessories and Options

Section 9 - Specification

9.1	Wheels and counterweights	9-1
9.2	Dimensions	9-7
9.3	Technical data	9-9

Section 10 - Index