
FX25, FX45, FX28, FX38, FX48, FX58

REPAIR MANUAL

COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	2
SECTION 14 - LIVE P.T.O.	3
SECTION 21 - TRANSMISSION	4
SECTION 23 - 4WD LINES	4
SECTION 25 - FRONT MECHANICAL DRIVE	4
SECTION 29 - HYDROSTATIC TRANSMISSION	5
SECTION 33 - BRAKES AND CONTROL	5
SECTION 35 - HYDRAULIC SYSTEM	5
SECTION 50 - CAB CLIMATE CONTROL	8
SECTION 55 - ELECTRICAL SYSTEM	8
SECTION 60 - PRODUCT FEED	10
SECTION 64 - CUTTERHEAD	12
SECTION 70 - EJECTION	12

The following pages are the collation of the contents pages from each section and chapter of the FX25 - FX58 Repair manual. Complete Repair part # 87051240.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the FX25 - FX58 Forage Harvesters.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87001241

Chapter 1 - General

CONTENTS

Section	Description	Page
00.000	General instructions	2
	Safety regulations	5
	Explanation of machine and attachment serial numbers	9
	Units of measure - conversion chart	11
	Tightening torques	12
	Drivelines and components	14
	Lubricant application guide	18

SECTION 10 - ENGINE

BOOK 1 - 87001241

Chapter 1 - Iveco Aifo Engine

CONTENTS

Section	Description	Page
10.101	Cylinder head bolts	2
10.105	Valve clearance	2
10.218	Fuel injectors	3
10.242	Removal and installation of fuel injection pump	4
	Timing	5
10.400	Cooling system	8

SECTION 14 - LIVE P.T.O.

BOOK 1 - 87051241

Chapter 1 - Main Drive Gearbox

CONTENTS

Section	Description	Page
14.100	Removal of the main drive gearbox	2
	Removal of shields and doors	2
	Removal of p.t.o. shafts	4
	Removal of the battery box	4
	Removal of the fuel reservoir	5
	Removal of the main drive belt assembly	9
	Removal of the hydraulic and the hydrostatic pump assembly	9
	Removal of the main drive gearbox	11
	Replacing the rubber damper on the engine output shaft	13
	Splitting the main drive gearbox	14
	Disassembly and assembly of the components in the rear half of the gearbox	14
	Disassembly and assembly of the front half of the gearbox	19
	Removal and disassembly of hydraulic clutch	19
	Removal and installation of the pressure hose	21
	Replacing clutch plates	22
	Replacing the seals in the clutch	23
	Removal and installation of the clutch driven shaft	26
	Installation of the clutch into the gearbox half	27
	Connecting the two gearbox halves together	28
	Installation of the main drive gearbox	30
	Installing the main drive gearbox	30
	Installation of the hydraulic and the hydrostatic pump assemblies	31
	Installation of the main drive belt assembly	32
	Installation of the fuel reservoir	33
	Installing the battery box and the batteries	36
	Installing the PTO shafts	36
	Starting up the forage harvester	37

SECTION 21 - TRANSMISSION

BOOK 1 - 87051241

Chapter 1 - Traction Gearbox

CONTENTS

Section	Description	Page
21.145	Lubrication	2
	Gearbox shafts and shifting diagram	3
	Disassembly of traction gearbox	4
	Assembly of traction gearbox	9

SECTION 23 - 4WD LINES

BOOK 1 - 87051241

Chapter 1 - 4WD Angle Gearbox

CONTENTS

Section	Description	Page
23.000	Removal from the base unit	2
	Disassembly of 4WD angle gearbox	2
	Assembly of 4WD angle gearbox	4
	Installation on base unit	6

SECTION 25 - FRONT MECHANICAL DRIVE

BOOK 1 - 87051241

Chapter 1 - Final Drives

CONTENTS

Section	Description	Page
25.310	Lubrication	2
	Disassembly and assembly of final drives	2

SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87051242

Chapter 1 - Hydrostatic Transmission

CONTENTS

Section	Description	Page
29.212	Lubrication	2
	Hydrostatic circuit and components	4
	Filling and bleeding the hydrostatic system	8
29.216	Hydrostatic pump - Characteristics	10
	Operation of the multifunction valve	12
	Hydrostatic motor - Characteristics	14

SECTION 33 - BRAKES AND CONTROL

BOOK 2 - 87051242

Chapter 1 - Brakes and Control

CONTENTS

Section	Description	Page
33.110	Parking brake adjustment	2
33.202	Replacement of the brake linings	3
	Brake cylinders	4
	Bleeding the brakes	5
	Disassembly and assembly of brake shoes and discs	7

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 87051242

Chapter 1 - General

CONTENTS

Section	Description	Page
35.000	Torque tables for hydraulic components	2
35.304	Disassembly and assembly of pump group	4

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 87061242

Chapter 2 - Work Hydraulics - Attachment Height Control

CONTENTS

Section	Description	Page
35.000	Circuit diagrams - Attachment height control	2
35.300	Hydraulic reservoir	8
	Low pressure filter	9
	High pressure filter	9
	Non return valve	10
	Breather	11
35.304	Work hydraulics pump	11
	High pressure relief valve	12
35.410	Attachment height control valve (EMR)	12
	Attachment compensation valve	19
	Pressure sensor	21
	Hydropneumatic accumulators	22
	Attachment lift cylinders	24

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 87061242

Chapter 3 - Work Hydraulics - Base Unit

CONTENTS

Section	Description	Page
35.000	Circuit diagrams - Base unit	2
35.310	Stack valves	9
	Load sensing valve	11
	Cutterhead reverse drive motor	12
	Spout rotation pressure relief valve	15
	Quick release couplings	17
	Spout lift cylinder	18

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 87051242

Chapter 4 - Steering Hydraulics

CONTENTS

Section	Description	Page
35.000	Circuit diagrams - Steering hydraulics	2
35.310	Steering hydraulics pump	7
	Steering valve	8
	Steering cylinders	9

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 87051242

Chapter 5 - Low Pressure Hydraulics

CONTENTS

Section	Description	Page
35.000	Circuit diagrams - Low pressure hydraulics	2
35.300	Low pressure hydraulic reservoir	10
	Oil filter	10
	Oil change and fill procedure	17
35.310	Low pressure pump	18
	Low pressure valve	20
	Main drive belts tensioning cylinder	25
	Spout deflector cylinder	26

SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 87051242

Chapter 6 - Hi-Flow Hydraulics

CONTENTS

Section	Description	Page
35.000	Circuit diagrams - Hi-flow hydraulics	2

SECTION 50 - CAB CLIMATE CONTROL

BOOK 2 - 87051242

Chapter 1 - Cab Climate Control

CONTENTS

Section	Description	Page
50.000	Correct use of the air conditioning system	2
	Storage maintenance	2
50.200	Air conditioning circuit and component specifications	3
	Compressor clutch replacement	6
50.205	Ventilation unit	10

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87051245

Chapter 1 - Electrical Circuits

CONTENTS

Section	Description	Page
55.000	General information	2
55.100	Connectors	11

SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87051245

Chapter 3 - Wiring Diagrams FX NA

CONTENTS

Section	Description	Page
55.000	Wiring diagrams FX NA	2

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87051244

Chapter 4 - Can Network Basics

CONTENTS

Section	Description	Page
55.000	General layout electronic system	2
	Can spy	6
	Error codes messages	14
	Fault finding routine	16

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87051244

Chapter 5 - Calibration

CONTENTS

Section	Description	Page
55.000	Machine calibration with Laptop	2
	Machine calibration with PDT tool	9

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87051244

Chapter 6 - Software Update

CONTENTS

Section	Description	Page
55.000	Software update with Laptop	2
	Software update with PDT tool	4

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87051244

Chapter 7 - Troubleshooting

CONTENTS

Section	Description	Page
55.000	Error messages overview	
	- Machine error messages	2
	- Attachment height control error messages	54
	- Caterpillar error messages	60
	List of Can identifier	62
	Detailed analysis per function	89

SECTION 60 - PRODUCT FEED

BOOK 5 - 87051245

Chapter 1 - Feed Rolls

CONTENTS

Section	Description	Page
60.103	Removal and installation of lower feed rolls	2
60.107	Inspection between upper feed rolls and cutterhead	7
	Flip down upper feed rolls	10
	Detaching - attaching of attachment with upper feed rolls	12
	Removal - installation of upper feed rolls	17
	Disassembly and assembly of upper feed roll drive chain box	22

SECTION 60 - PRODUCT FEED

BOOK 5 - 87051245

Chapter 2 - Length-Of-Cut and Feed Roll Drive Gearbox

CONTENTS

Section	Description	Page
60.122	Gearbox shafts and shifting diagram	2
	Removal of length-of-cut gearbox from the chopperbody	4
	Length-of-cut gearbox assembly	5
	Length-of-cut gearbox disassembly	12
	Installation of length-of-cut gearbox on the chopperbody	27

SECTION 60 - PRODUCT FEED

BOOK 5 - 87051245

Chapter 3 - Electromagnetic Reversing Gearbox

CONTENTS

Section	Description	Page
60.165	Operation of electromagnetic reversing gearbox	2
	Removing the reversing gearbox from the machine	6
	Disassembly and assembly of the electromagnetic clutch (type Warner)	8
	Burnishing procedure of the electromagnetic clutch (type Warner).	11
	Disassembly and assembly of the electromagnetic clutch (type Stromag)	13
	Removal and installation of feed roll and attachment drive safety clutch	18
	Disassembly and assembly of the reversing gearbox	20

SECTION 64 - CUTTERHEAD

BOOK 5 - 87051245

Chapter 1 - Chopping

CONTENTS

Section	Description	Page
64.000	Splitting of components	2
	Attaching and detaching the attachment	3
	Removal - installation of chopper body with A-frame	5
	Removal - installation of chopper body with hydraulic jack	12
64.100	Removal - installation of rotor and bearings	21
64.130	Removal - installation of cutterhead gearbox	27
	Disassembly and assembly of cutterhead gearbox	28
64.150	Removal - installation of shearbar	34
	Removal and installation of shearbar support	37

SECTION 70 - EJECTION

BOOK 5 - 87051245

Chapter 1 - Blower

CONTENTS

Section	Description	Page
70.000	Inspection between cutterhead and blower	2
70.120	Removal and installation of blower	3
70.100	Removal and installation of blower gearbox	4
	Disassembly and assembly of blower gearbox	6